

Chapter 3 : Installation




NOTE:

Before installation, please disconnect all the power sources and critical loads connected to the UPS. Otherwise, the Mini SNMP might have shorting issues which may lead to UPS shutdown or damage.


- Please follow the procedures below to install the Mini SNMP into your UPS's Mini slot.

Step 1 Cut off the cover from the Mini slot. Use a proper tool to snip at the three points (*see Figure 3-a*).

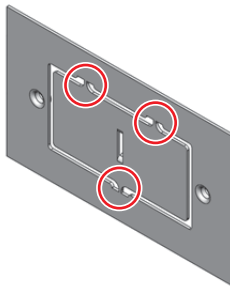

(Figure 3-a)

Step 2 Pull out the flat wire and remove the plate. Use a proper tool to cut off the straps that are tied to the flat wire (*see Figure 3-b*).

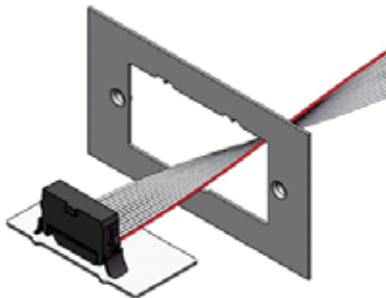

(Figure 3-b)